

SET-UP INSTRUCTIONS

How can the **DB91-TX** be used
as an RTP Sender, sending audio to
DB91-RX decoder used as an RTP Receiver



Contents

General information	4
<i>DB91-TX and DB91-RX Set-up</i>	4
<i>DB91-TX RTP Sender set-up</i>	4
<i>DB91-RX RTP Receiver set-up</i>	7
Appendix A	9
Appendix B	13

THIS PAGE
IS INTENTIONALLY
LEFT BLANK

General information

The IP Audio encoder and decoder are controlled through a built-in WEB Server and a standard web browser is used to monitor their status or to make some adjustments. To operate the devices you need to know their IP Address. In case you are not aware of the IP Addresses and how to open the WEB interface, please refer to [“Appendix A - DB91-TX Quick User Guide” on page 9](#) and [“Appendix B - DB91-RX Quick User Guide” on page 13](#).


This configuration is perfect if your setup requires only point-to-point connection. It has a minimum and almost constant delay value (usually less than a second).

DB91-TX AND DB91-RX SET-UP

Prior to implementing the below written adjustments, the following requirements should be fulfilled:

- DB91-TX should be connected to a Network (Internet or LAN).
- DB91-TX could be set with dynamic IP.
- DB91-RX configured as RTP receiver with static IP.
- If the DB91-RX is placed behind a router, you will have to make sure that the RTP Receiver port is properly NAT forwarded.

DB91-TX RTP SENDER SET-UP

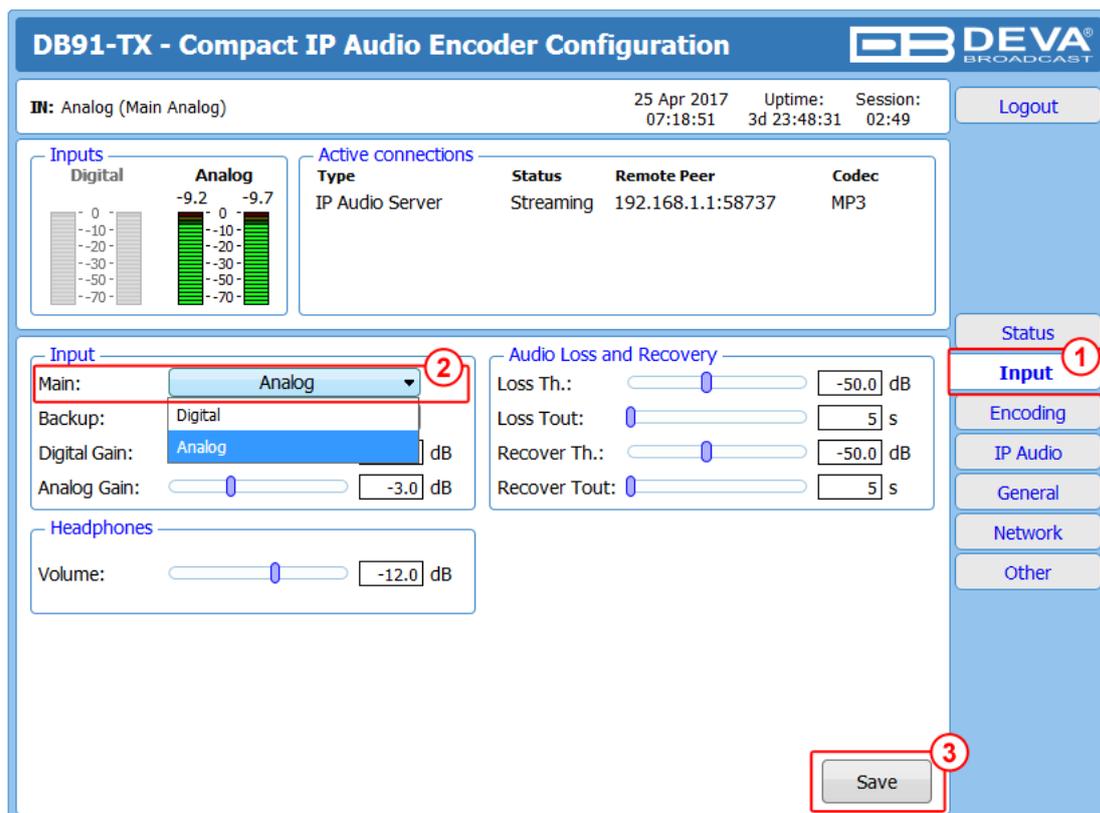

DB91-TX - Compact IP Audio Encoder Configuration

IN: Analog (Main Analog) 25 Apr 2017 Uptime: 07:18:51 Session: 3d 23:48:31 02:49 Logout

Inputs

Digital: [Bar graph showing levels from 0 to -70]

Analog: [Bar graph showing levels from -9.2 to -9.7]

Active connections

Type	Status	Remote Peer	Codec
IP Audio Server	Streaming	192.168.1.1:58737	MP3

Input

Main: Analog (2) Backup: Digital

Digital Gain: Analog dB

Analog Gain: [Slider] -3.0 dB

Headphones

Volume: [Slider] -12.0 dB

Audio Loss and Recovery

Loss Th.: [Slider] -50.0 dB

Loss Tout: [Slider] 5 s

Recover Th.: [Slider] -50.0 dB

Recover Tout: [Slider] 5 s

Status: Input (1)

Encoding

IP Audio

General


Network

Other

Save (3)

1. Go to **Settings > Input**;
2. Choose the preferred audio **signal input**;
3. Press [Save];

4. Go to **Settings**> **Encoding**;

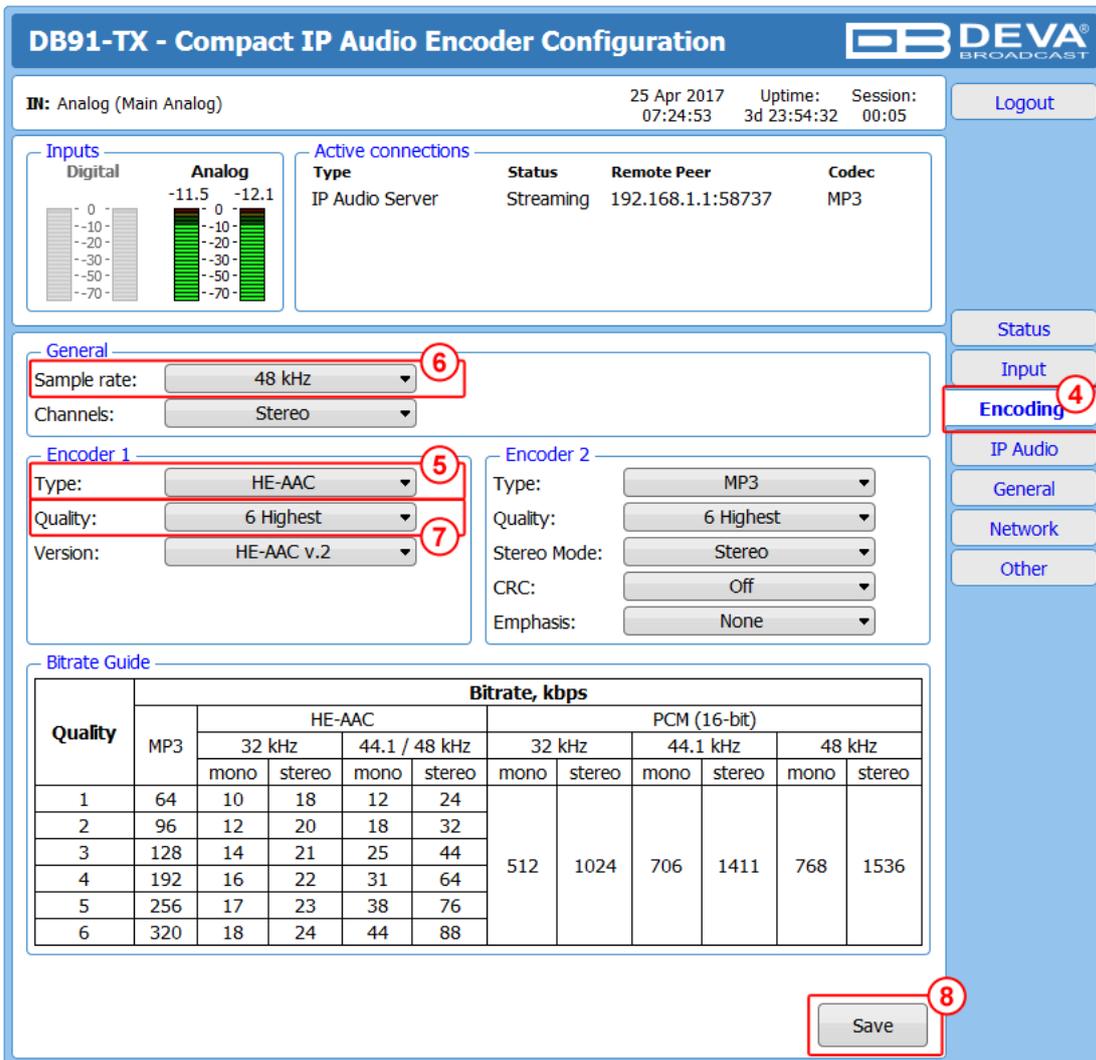

DB91-TX - Compact IP Audio Encoder Configuration

IN: Analog (Main Analog) 25 Apr 2017 Uptime: Session:
 07:24:53 3d 23:54:32 00:05 Logout

Inputs

Digital: -0, -10, -20, -30, -50, -70

Analog: -11.5, 0, -12.1, -10, -20, -30, -50, -70

Active connections

Type	Status	Remote Peer	Codec
IP Audio Server	Streaming	192.168.1.1:58737	MP3

General

Sample rate: 48 kHz (6)

Channels: Stereo

Encoder 1 (5)

Type: HE-AAC (7)

Quality: 6 Highest

Version: HE-AAC v.2

Encoder 2

Type: MP3

Quality: 6 Highest

Stereo Mode: Stereo

CRC: Off

Emphasis: None

Bitrate Guide

Quality	Bitrate, kbps										
	MP3	HE-AAC				PCM (16-bit)					
		32 kHz		44.1 / 48 kHz		32 kHz		44.1 kHz		48 kHz	
	mono	stereo	mono	stereo	mono	stereo	mono	stereo	mono	stereo	
1	64	10	18	12	24	512	1024	706	1411	768	1536
2	96	12	20	18	32						
3	128	14	21	25	44						
4	192	16	22	31	64						
5	256	17	23	38	76						
6	320	18	24	44	88						


Save (8)

5. Assign **Encoder type**;
6. Assign **Sample rate**;
7. Assign desired **Signal Quality**.

The combination of these parameters will define the stream bitrate (see **Bitrate Guide** table at the bottom of this screen). The network connection should have enough bandwidth to process all the streams. As a rough estimate, the bandwidth should be at least twice the stream's bitrate, multiplied by the number of simultaneous connections;

8. Press [Save];

9. Go to **Settings > IP Audio**;

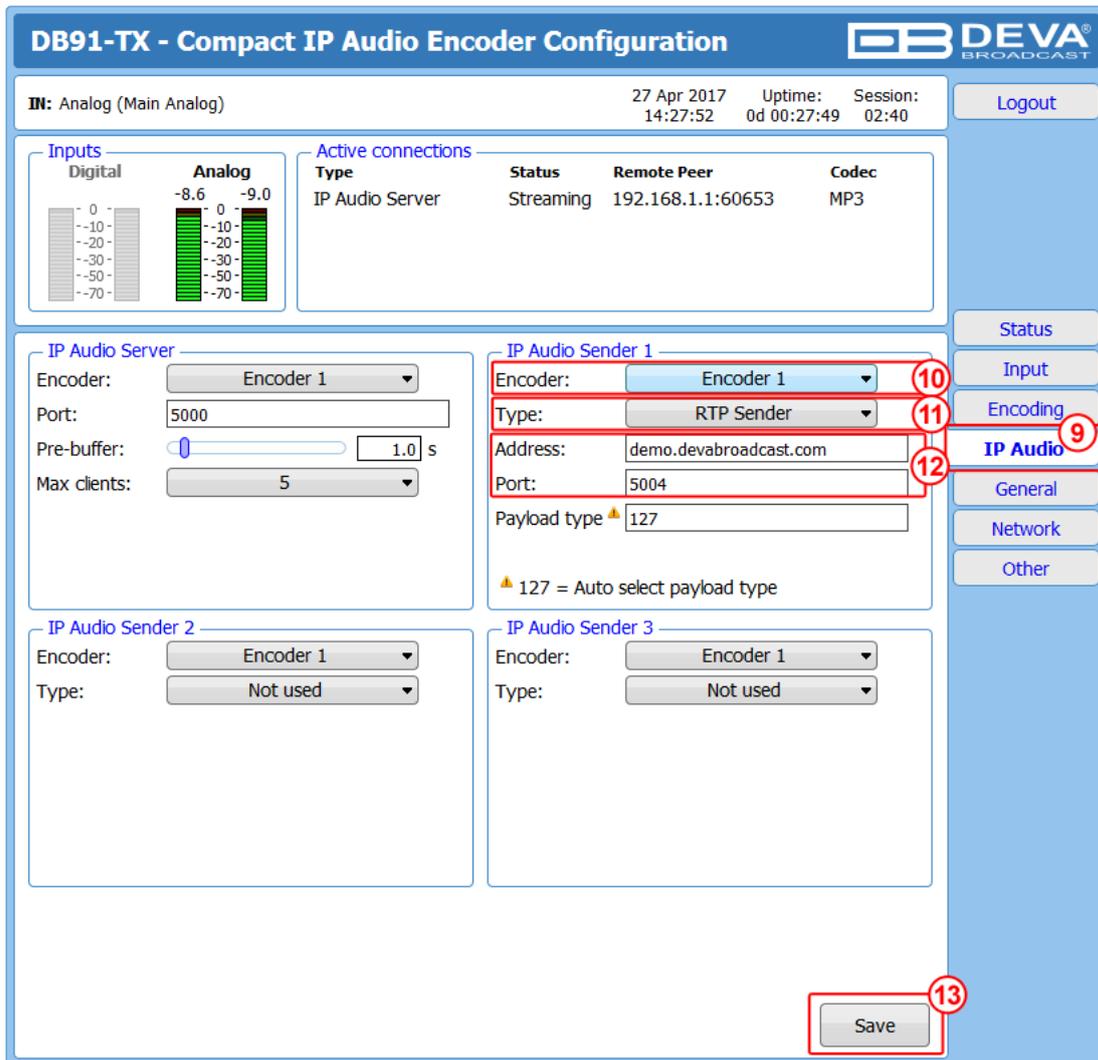


10. Then in **IP Audio Sender 1/2/3** section - specify **Encoder** from the drop-down menu;
11. Select **RTP Sender** from the drop down menu;
12. Specify **URL, IP Address** or Multicast group IP address, and **Port** of the RTP Receiver to be used;
13. Press [Save].

FOR YOUR INFORMATION: A multicast address (Mcast group) is a logical identifier for a group of hosts in a computer network, that are available to process datagrams or frames intended to be multicasted for a designated network service.

Multicast works in a local network or any other network that is specially set/configured. For more information as regards how a multicast network could be set, please refer to your network administrator.

For detailed information and instructions on how communication with the DB91-TX can be established, please refer to [“Appendix A - DB91-TX Quick User Guide” on page 9.](#)

DB91-RX RTP RECEIVER SET-UP

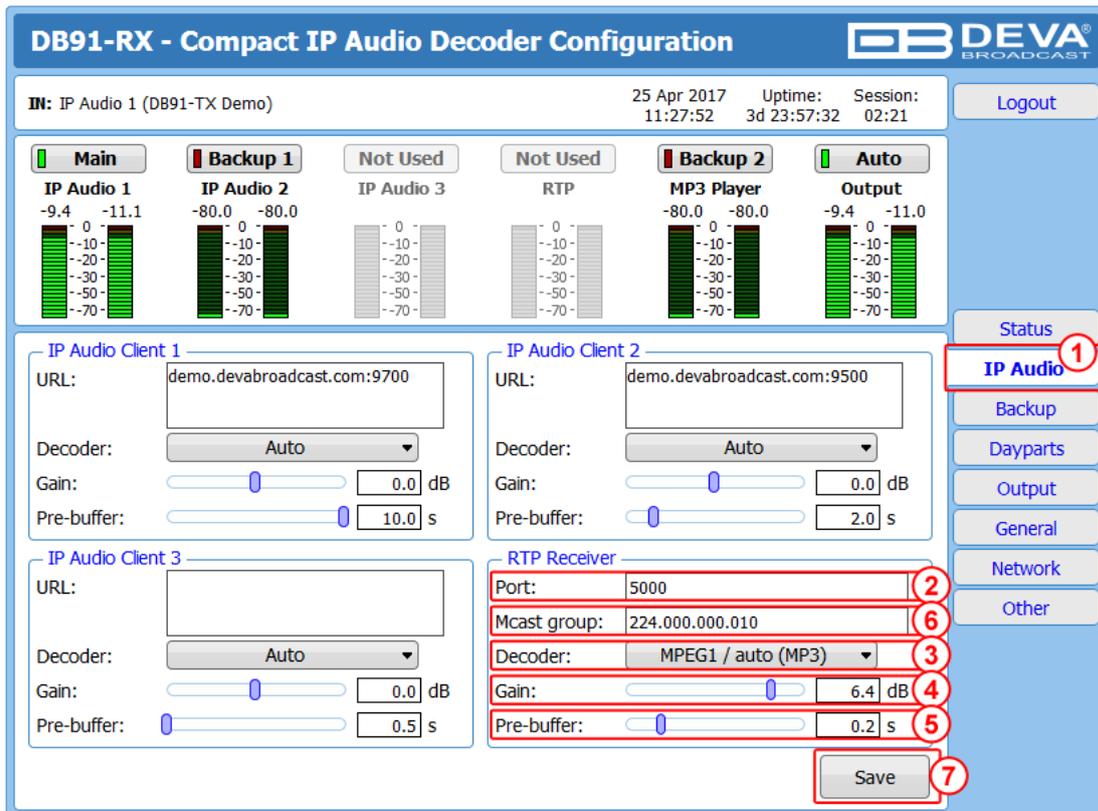


The screenshot displays the configuration page for the DB91-RX Compact IP Audio Decoder. At the top, it shows system information like the date (25 Apr 2017) and uptime (3d 23:57:32). Below this are several status indicators for different audio channels: Main, Backup 1, Not Used, Not Used, Backup 2, and Auto. Each indicator has associated level meters. The main configuration area is divided into sections for IP Audio Clients (1, 2, 3) and an RTP Receiver. The RTP Receiver section is highlighted with red boxes and numbers 2 through 7, indicating the steps for configuration: setting the Port (5000), Mcast group (224.000.000.010), Decoder (MPEG1 / auto (MP3)), Gain (6.4 dB), Pre-buffer (0.2 s), and finally clicking the Save button.

1. Go to **Settings > IP Audio**;
2. RTP Receiver section - Specify the audio player **Port**;
3. Specify **Decoder** to be used;
4. Set **Gain**;
5. Set **Pre-buffer**;
6. If needed, specify **Multicast group** IP address;
7. Press [Save];

FOR YOUR INFORMATION: A multicast address (Mcast group) is a logical identifier for a group of hosts in a computer network, that are available to process datagrams or frames intended to be multicasted for a designated network service.

Multicast works in a local network or any other network that is specially set/configured. For more information as regards how a multicast network could be set, please refer to your network administrator.

8. Go to **Settings > Backup**;

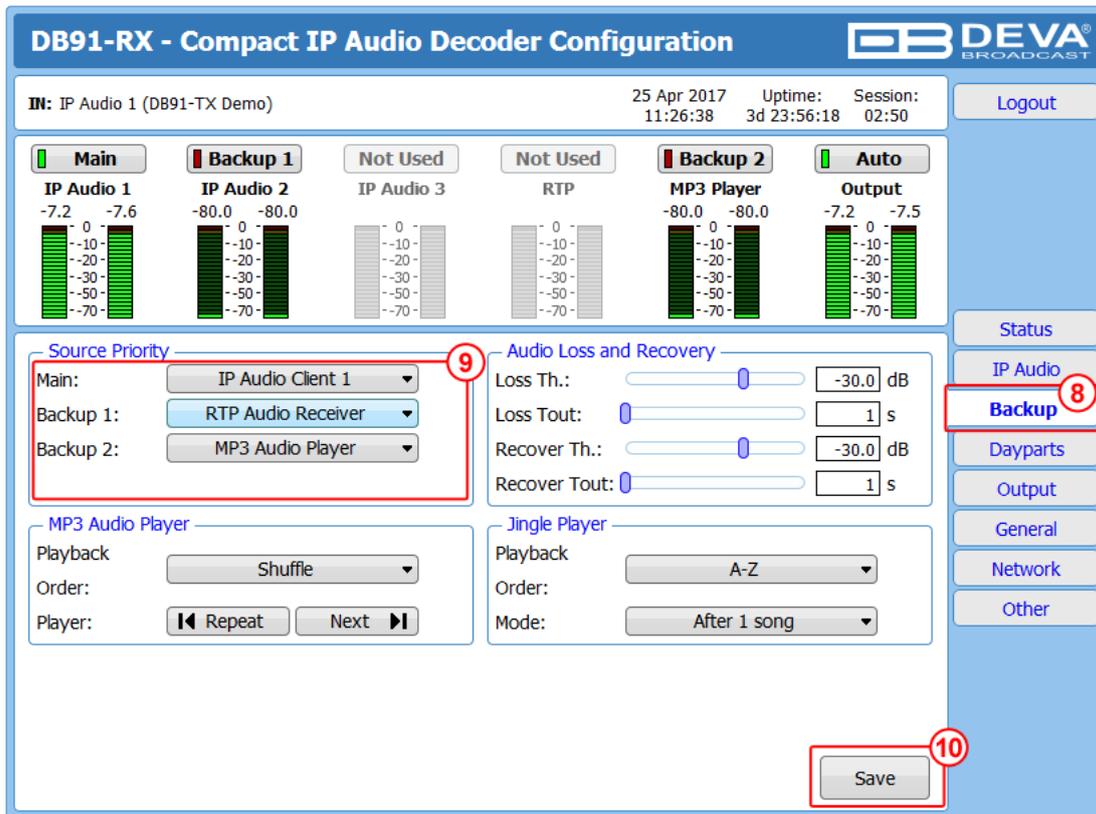

The screenshot displays the configuration page for the DB91-RX Compact IP Audio Decoder. At the top, it shows the system status: 'IP Audio 1 (DB91-TX Demo)', date '25 Apr 2017', time '11:26:38', uptime '3d 23:56:18', and session '02:50'. There is a 'Logout' button. Below this are several audio level meters for 'Main', 'Backup 1', 'IP Audio 3', 'RTP', 'Backup 2', and 'Auto'. The 'Source Priority' section has three dropdown menus: 'Main' (IP Audio Client 1), 'Backup 1' (RTP Audio Receiver), and 'Backup 2' (MP3 Audio Player). The 'Audio Loss and Recovery' section includes sliders and input fields for 'Loss Th.' (-30.0 dB), 'Loss Tout' (1 s), 'Recover Th.' (-30.0 dB), and 'Recover Tout' (1 s). The 'MP3 Audio Player' section has a 'Shuffle' dropdown and 'Repeat'/'Next' buttons. The 'Jingle Player' section has an 'A-Z' dropdown and an 'After 1 song' dropdown. A 'Save' button is located at the bottom right. A right-hand menu contains buttons for 'Status', 'IP Audio', 'Backup', 'Dayparts', 'Output', 'General', 'Network', and 'Other'.

9. From the **Source Priority** section set the priority of the **RTP Audio Player**.

10. Press Save[10] to save the changes.

For detailed information and instructions on how communication with the DB91-RX can be established, please refer to [“Appendix B - DB91-RX Quick User Guide” on page 13](#).

Appendix A

Quick User Guide

DB91-TX

Compact IP Audio Encoder

→ **BEFORE YOU USE THIS PRODUCT** ←

In order to be able to enjoy all the benefits of owning your new DEVA product, please verify first that the latest software and firmware release were installed.

Visit www.devabroadcast.com/downloads for the most recent software and firmware downloads, prior the installation.

This Quick user guide will make the installation of **DB91-TX** quick and easy. Applying these principles, you can simplify the process and save yourself extra time and effort. **For more information about the Safety precautions and the Operating environment recommendations please refer to the User Manual.**

STEP 1**Connection**

1. The encoder has to be connected to the local network or Internet by cable with RJ-45 connector;
2. As only one input at a time can be managed by the encoder, please select the preferred signal source input - either analog or digital one:
 - For Analog audio use a cable that ends with two standard RCA jacks to connect the analog signal source to the analog audio inputs of DB91-TX;
 - For Digital audio use a cable that ends with standard RCA jack to connect the S/PDIF signal source to the digital audio input of DB91-TX;
3. Connect the device to the power supply.

STEP 2**Configuration**

DB91-TX is controlled through a built-in WEB Server and a standard web browser can be used to monitor its status or to make some adjustments.


To operate the device you need to know its IP Address. In case you are not aware of it, you can hear it through the headphones when you turn on the device. Alternatively, use the Network discovery feature at Local networks (for reference see Step 3).

STEP 3**Network discovery for Windows 7**

Network discovery is a network setting that defines whether your computer can see (find) other computers and devices on the network and whether other computers on the network can see your computer. By default, Windows Firewall blocks network discovery but you can enable it.


If you have already enabled this function on your computer just open a new Explorer bar and click on **(1)**. The device must be displayed.

1. Open Advanced sharing settings by clicking the Start button, and then on "Control Panel". In the search box, type "network", click "Network and Sharing Center", and then, in the left pane click "Change advanced sharing settings";
2. Select your current network profile;
3. Click **Turn on network discovery**, and then click Save changes. If you're prompted for an administrator password or confirmation, type the password or provide confirmation.
4. To access the device open a new Explorer bar and click on **(1)**. If you have successfully enabled the network discovery option, the device will be displayed. Double click on **(2)** will open a new WEB browser window requiring username and password. Default values being -Username: user or admin, Password: pass.

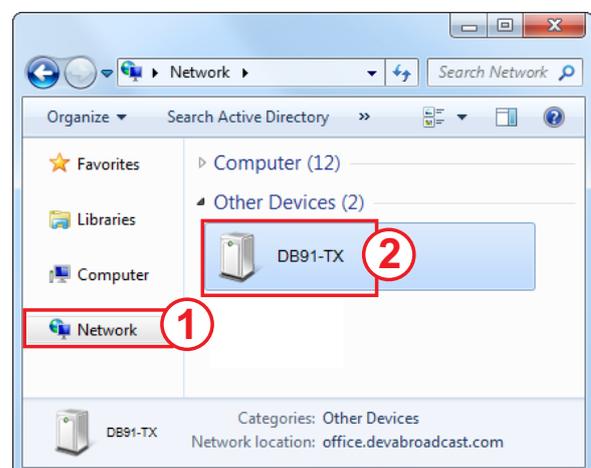

STEP 4 **WEB Interface**

A successful log-in in the WEB Interface will look like this:

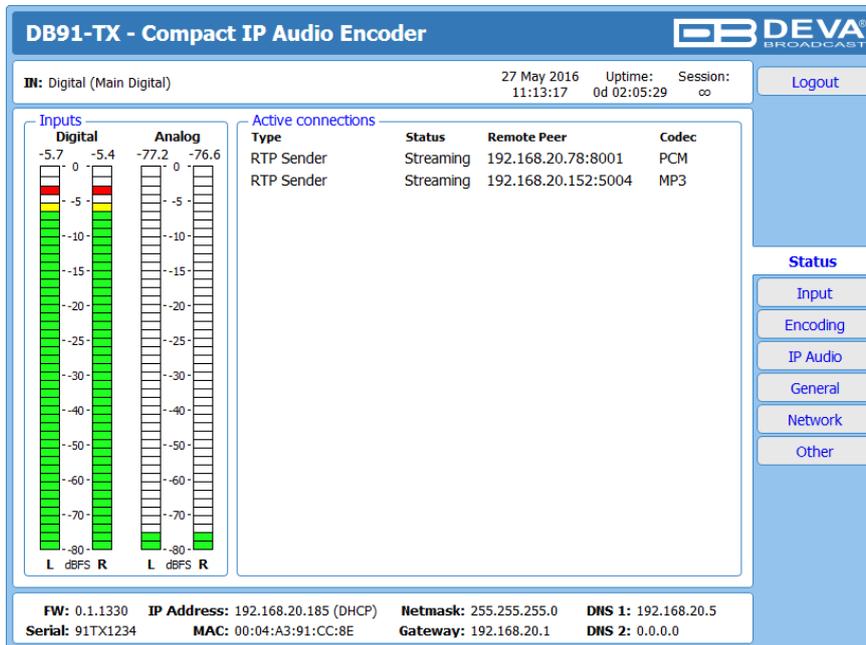


Upon opening the WEB interface, the main Status window will appear. The page contains information on the device's current status - the LED bar-graph representation of the left and right Digital and Analog audio levels in dBFS, as well as the Active connections - Type, Status, Remote Peer and Codec.

At the top of the control window is placed a constant section, containing information about the input in use, Date/Time and session timeout.

The DB91-TX provides you with a protected access to the device settings. Upon pressing the Settings button, a window requiring username and password will appear.


To make the necessary adjustments to the device log in as ADMINISTRATOR. This will give you full control over the settings. The default values being username: *admin*, password: *pass*);

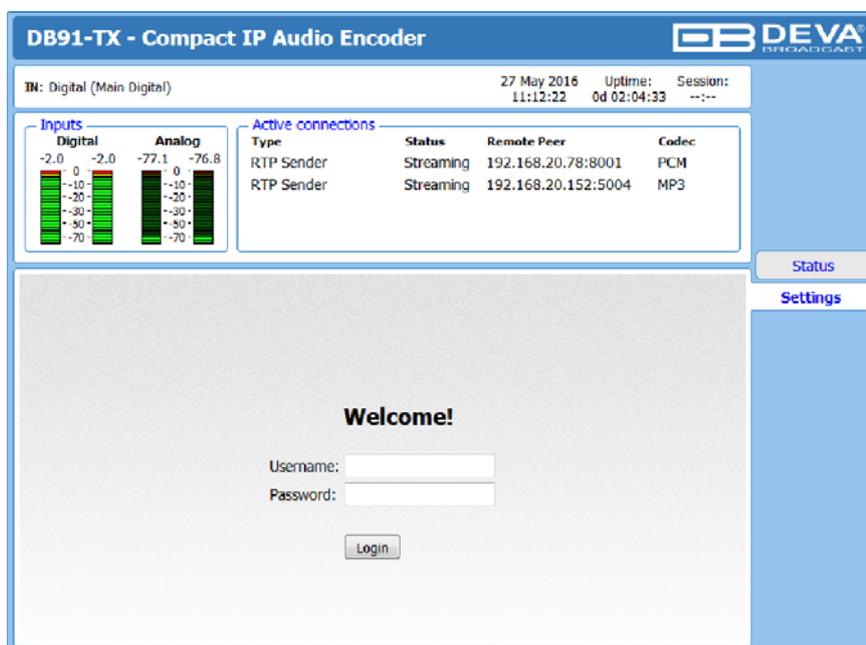

STEP 5

Device Settings

Upon entering the device's settings, you will be able to apply needed adjustments to the Inputs, Encoding and IP Audio configuration of the DB91-TX.

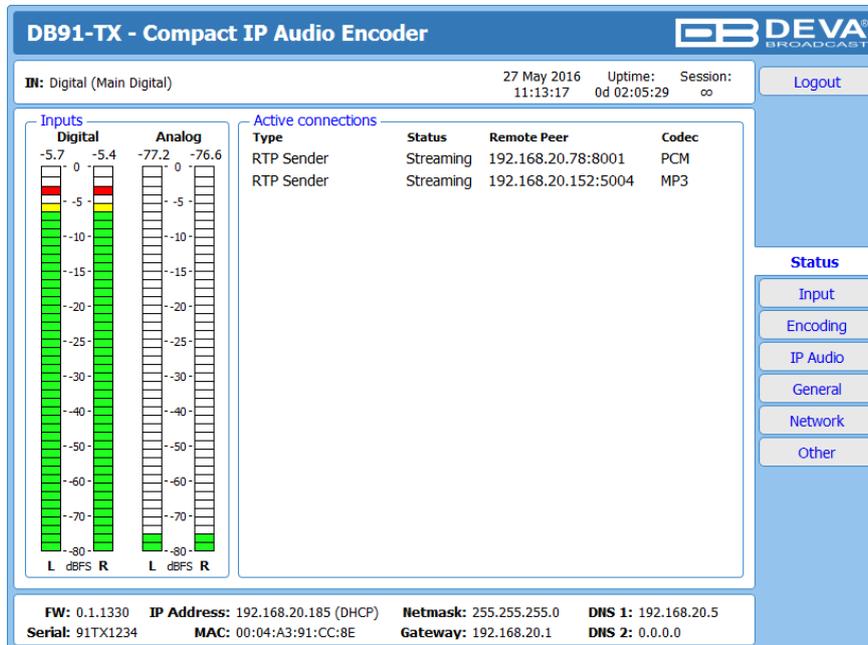

For further information on the available options and features, please refer to the User Manual which can be found on www.devabroadcast.com/downloads, and the accompanying CD.

Thank you for choosing DEVA!

Please refer to the User manual for detailed information on how to configure and explore your device.

Appendix B

Quick User Guide

DB91-RX

Compact IP Audio Decoder

→ **BEFORE YOU USE THIS PRODUCT** ←

In order to be able to enjoy all the benefits of owning your new DEVA product, please verify first that the latest software and firmware release were installed.

Visit www.devabroadcast.com/downloads for the most recent software and firmware downloads, prior the installation.

This Quick user guide will make the installation of **DB91-RX** quick and easy. Applying these principles, you can simplify the process and save yourself extra time and effort. **For more information about the Safety precautions and the Operating environment recommendations please refer to the User Manual.**

STEP 1**Connection**

1. Connect the device to a local network or to the Internet by a cable with an RJ-45 connector;
2. Connect the DB91-RX to the power supply.

RECOMMENDATION: Preferably, connect the device to a DHCP Server network from which DB91-RX will receive an IP address.

STEP 2**Configuration**


DB91-RX is controlled through a built-in WEB Server and a standard web browser can be used to monitor its status or to make some adjustments.

To operate the device you need to know its IP Address. In case you are not aware of it, you can hear it through the headphones when you turn on the device. Alternatively, use the Network discovery feature at Local networks (for reference see Step 3).

STEP 3**Network discovery for Windows 7**

Network discovery is a network setting that defines whether your computer can see (find) other computers and devices on the network and whether other computers on the network can see your computer. By default, Windows Firewall blocks network discovery but you can enable it.


If you have already enabled this function on your computer just open a new Explorer bar and click on **(1)**. The device must be displayed.

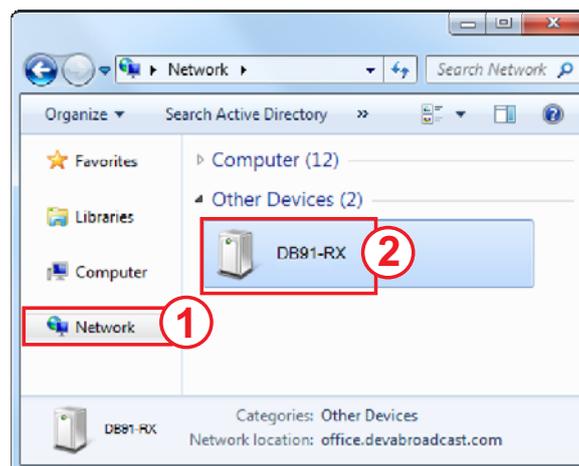

1. Open Advanced sharing settings by clicking the Start button, and then on "Control Panel". In the search box, type "network", click "Network and Sharing Center", and then, in the left pane click "Change advanced sharing settings";
2. Select your current network profile;
3. Click **Turn on network discovery**, and then click Save changes. If you're prompted for an administrator password or confirmation, type the password or provide confirmation.
4. To access the device open a new Explorer bar and click on **(1)**. If you have successfully enabled the network discovery option, the device will be displayed. Double click on **(2)** will open a new WEB browser window requiring username and password. Default values being -Username: user or admin, Password: pass.

STEP 4 **WEB Interface**

A successful log-in in the WEB Interface will look like this:

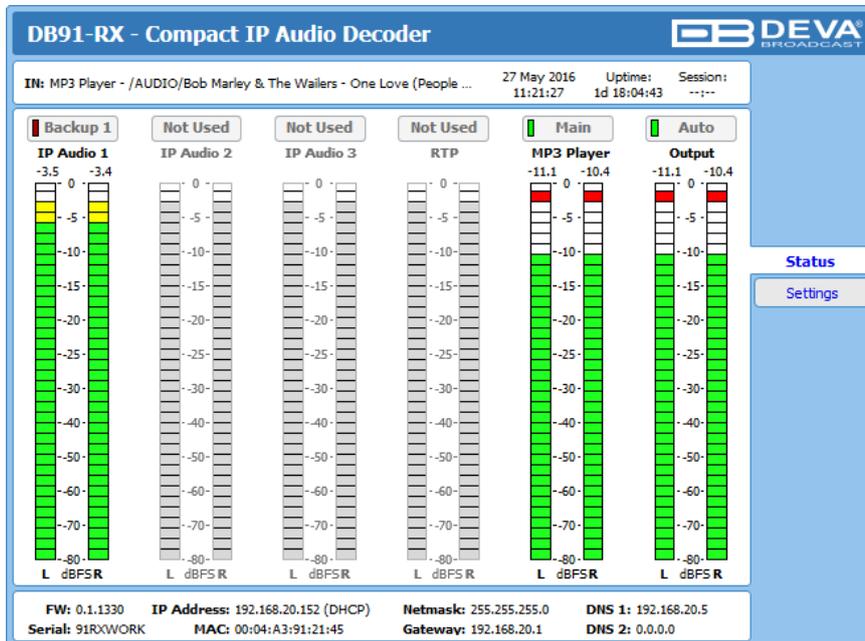


The main Status window contains information on the device's current status - the LED bar-graph representation of the audio sources. The interactive buttons placed over the LED bar-graphs allow the audio source to be manually changed.

If the mouse cursor is pointed at a label of an audio source, a balloon containing information for the Codec, Bit rate and Sample rate will appear (as depicted above).

The DB91-RX provides you with a protected access to the device settings. Upon pressing the Settings button, a window requiring username and password will appear.

In order to make the necessary adjustments to the device please log in as ADMINISTRATOR which will give you full control over the settings. The default values are username: *admin*, password: *pass*.

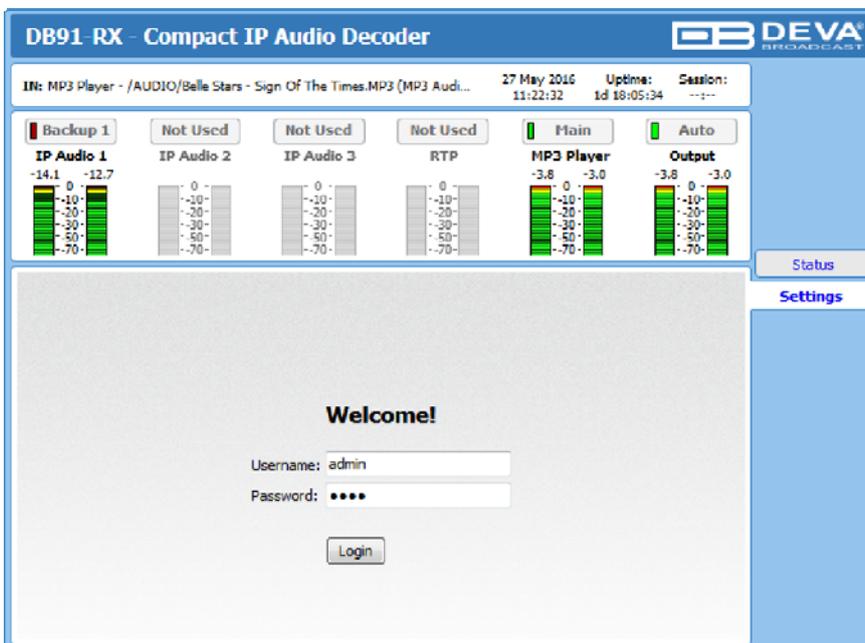

STEP 5**Device Settings**

Upon entering the device's settings, you will be able to apply needed adjustments to the DB91-RX. In order the applied settings to be used press the [Save] button, placed on the bottom right part of each screen.

The screenshot displays the 'DB91 RX Compact IP Audio Decoder Configuration' web interface. At the top, it shows the current URL: 'MP3 Player - /AUDIO/Belle Stars - Sign Of The Times.MP3 (MP3 Audi...'. The date and time are '27 May 2016 11:23:50', and the session information is 'Uptime: 1d 18:06:35' and 'Session: ∞'. A 'Logout' button is visible in the top right corner.

The main configuration area is divided into several sections:

- Backup 1:** Shows a volume meter with a value of -5.2.
- IP Audio 1:** Shows a volume meter with a value of -5.3.
- IP Audio 2:** Labeled 'Not Used'.
- IP Audio 3:** Labeled 'Not Used'.
- RTP:** Labeled 'Not Used'.
- MP3 Player:** Labeled 'Main', showing a volume meter with a value of -3.8.
- Output:** Shows a volume meter with a value of -3.8.

Below the meters, there are three IP Audio Client configurations and one RTP Receiver configuration:

- IP Audio Client 1:** URL: 'a1.virtualradio.eu:8000/powerfm.mp3', Decoder: 'Auto', Gain: '0.0 dB', Pre-buffer: '2.0 s'.
- IP Audio Client 2:** URL: 'www.katrafm.net:8000/live', Decoder: 'Auto', Gain: '0.0 dB', Pre-buffer: '2.0 s'.
- IP Audio Client 3:** URL: '192.168.20.172:5000', Decoder: 'Auto', Gain: '0.0 dB', Pre-buffer: '2.0 s'.
- RTP Receiver:** Port: '5004', Mcast group: '239.255.255.255', Decoder: 'MPEG1 / auto (MP3)', Gain: '0.0 dB', Pre-buffer: '0.0 s'.

A 'Save' button is located at the bottom right of the configuration area. On the right side of the interface, there is a vertical menu with buttons for 'Status', 'IP Audio', 'Backup', 'Dayparts', 'Output', 'General', 'Network', and 'Other'.

For further information on the available options and features, please refer to the User Manual which can be found on www.devabroadcast.com/downloads, and the accompanying CD.

Thank you for choosing DEVA!

Please refer to the User manual for detailed information on how to configure and explore your device.