


DB8000 Firmware Update


1. Connect your PC directly to DB8000 via UTP cable and check if the LAN LED is lit.
2. Start “DEVA BootLoader.exe”.
3. Click on “Open Firmware” button and select the file with DB8000 Firmware Update (the one with “*.bin” extension).
4. Check “LAN” Interface Radio Button.
5. From “NETWORK ADAPTER” Combo Box select the Network Adapter Card of the PC connected to DB8000.

The screen looks like the one shown below:

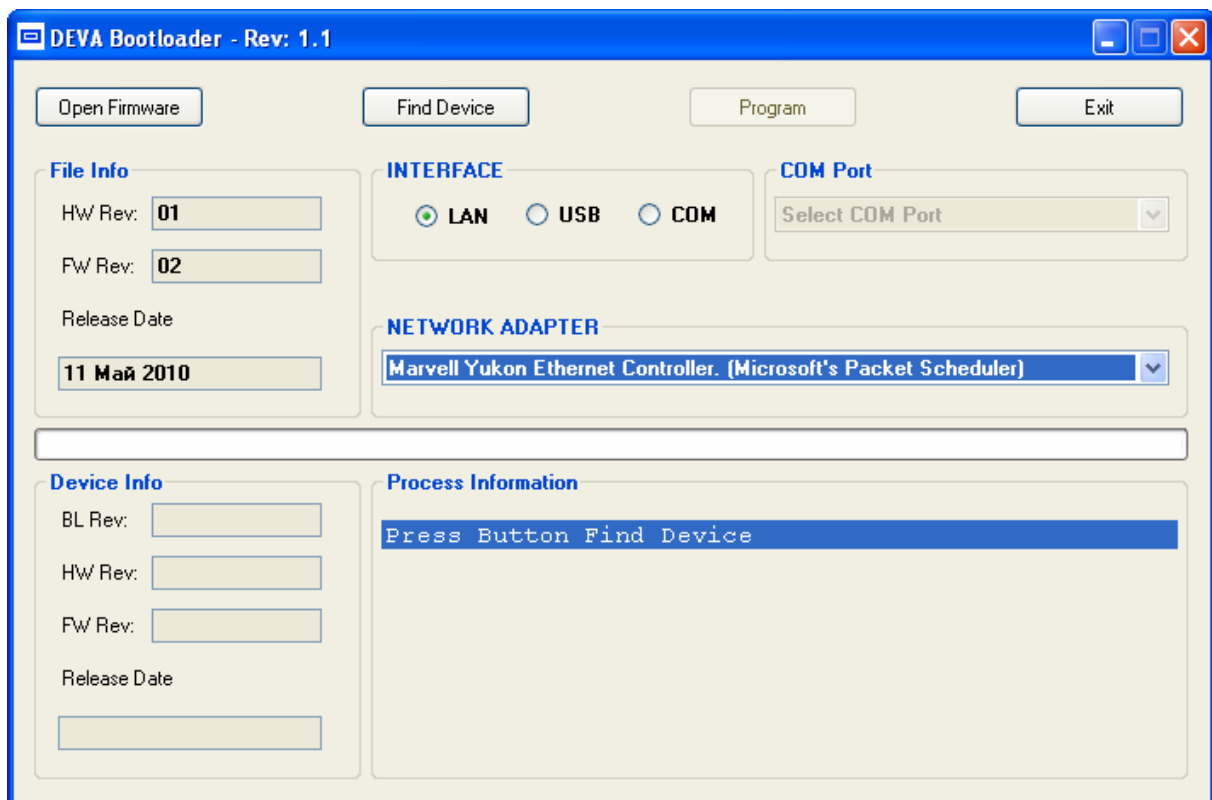


6. Turn OFF DB8000 by unplugging the Power Cord.
7. Click on “Find Device” button.
8. Plug-in the device Power Cord when you see “Searching Device ... Please turn OFF the device for 5 seconds.” in Process Information area. The Device will power on and will be recognized by the Boot Loader software.

- Click on “*Program*” button to start the updating process. This is indicated by the progress indicator and in *Progress Information* area. The screen will look as the one shown below:

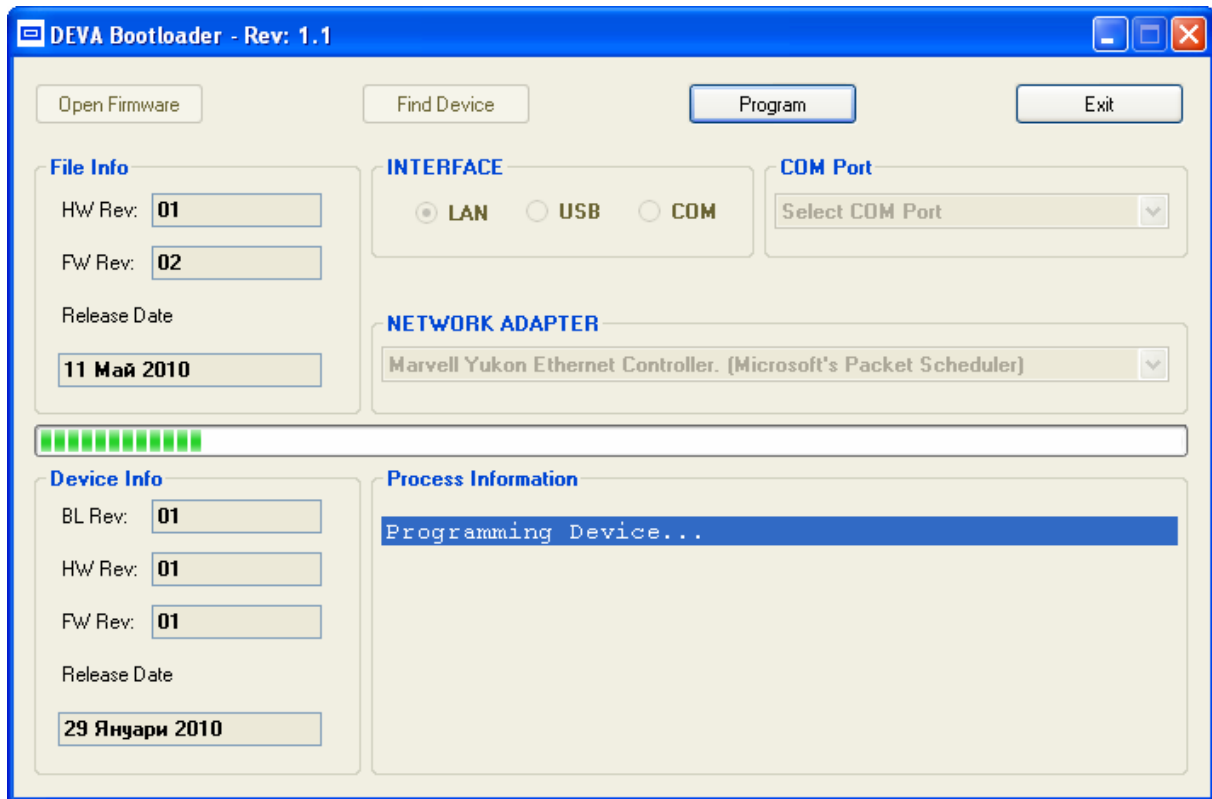

10. Firmware Upgrade completion is indicated by the progress indicator and in *Process Information* area as shown on the picture below:

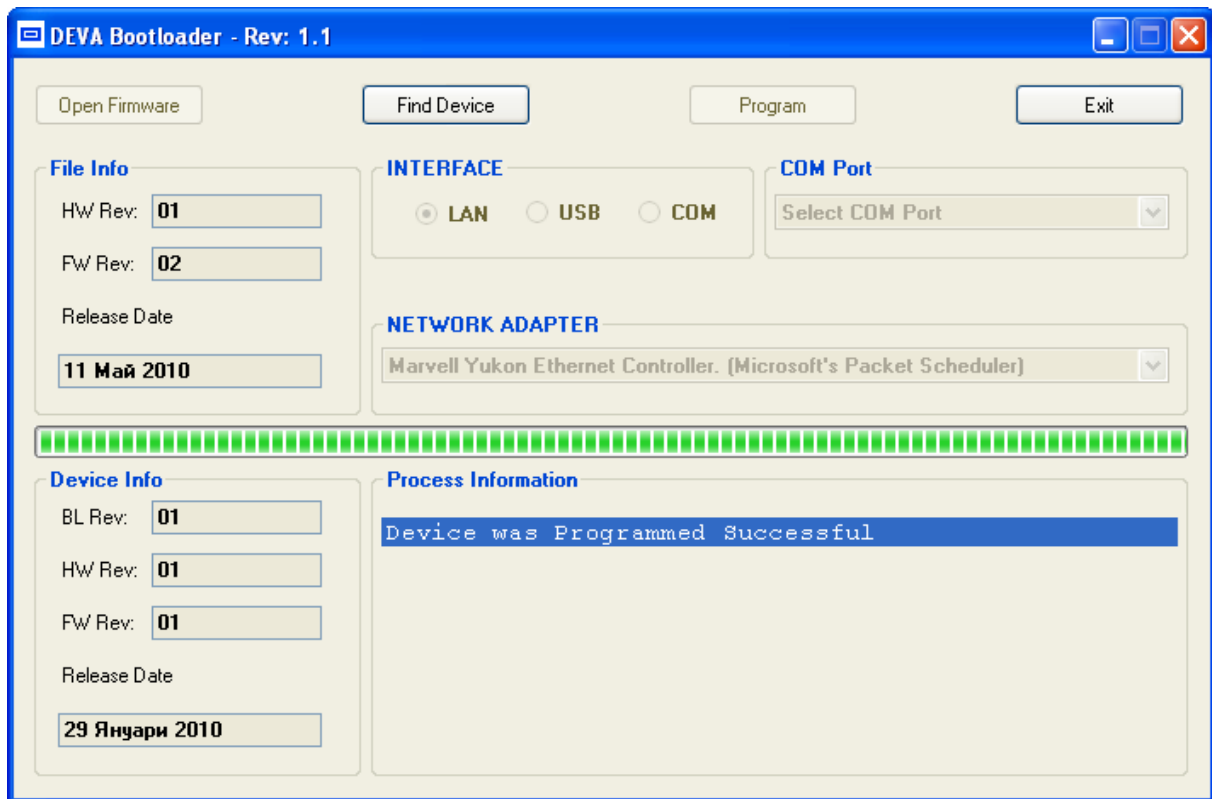

11. Wait for the process completion and close the window.

12. On DB8000 Device Menu "9.Factory Defaults" confirm with "YES" and press the "OK" button.

Note: All DB8000's parameters will be set to their Default values on completion of the Firmware Update procedure.